

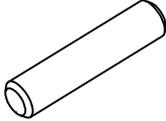
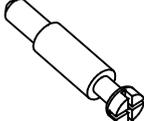


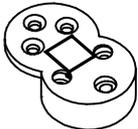

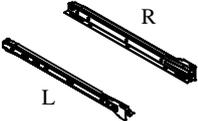
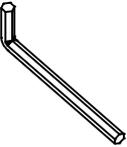
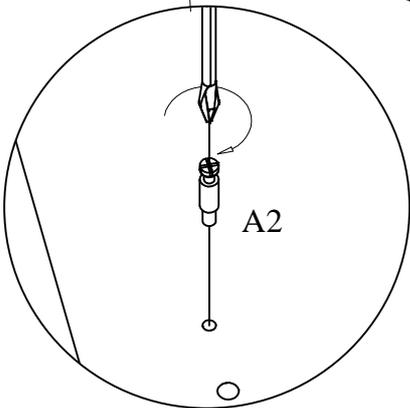
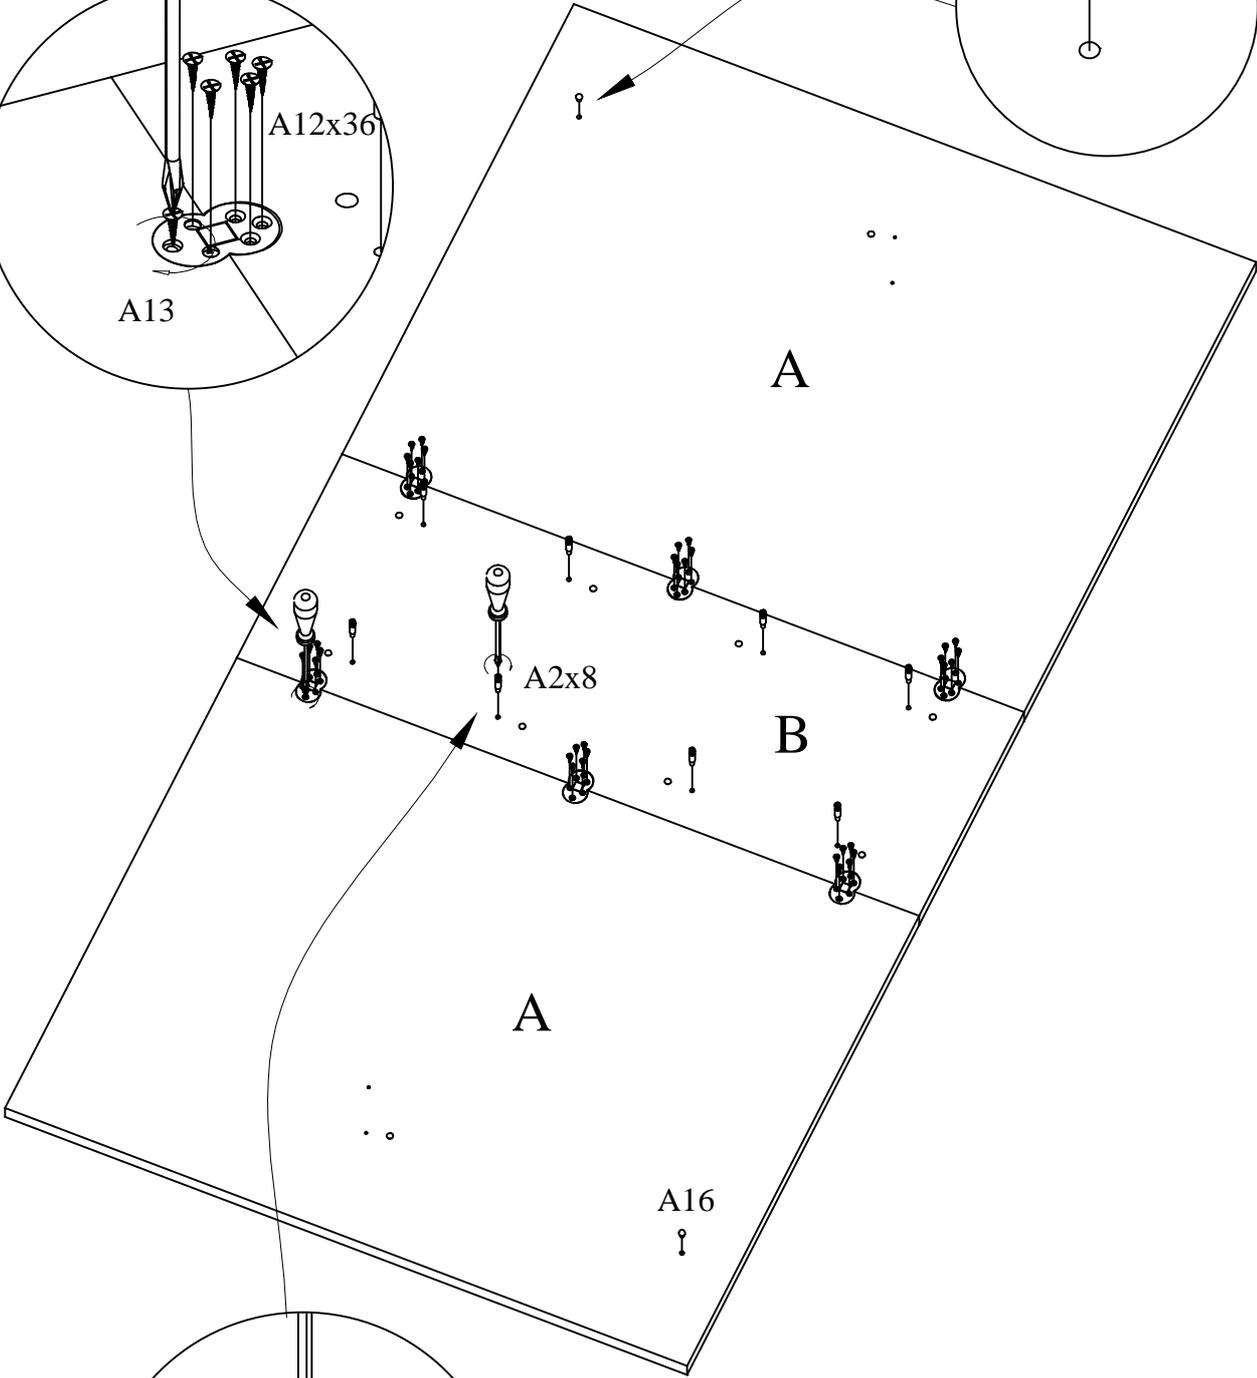
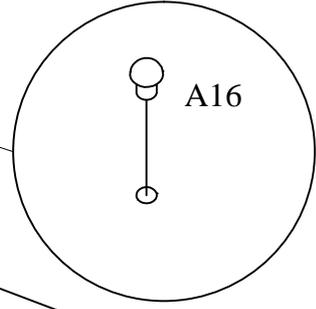


	A1	A2	A3	A4	A5	A6
						
	Ø8x35	Ø7x24	Ø15x12	Ø16	Ø3,5x15	80x41
QTY	x62	x32	x32	x4	x40	x4
	A7	A8	A9	A10	A11	A12
						
	M6x76			Ø2,5x13	Ø3,5x35	Ø3x15
QTY	x4	x4	x2	x8	x4	x42
	A13	A14	A15	A16	A17	A18
						
				Ø5		Ø6,3x11
QTY	x6	x4	x4	x12	x1	x4
	A19	A20				
						
	4mm					
QTY	x1	x2				


Step 1

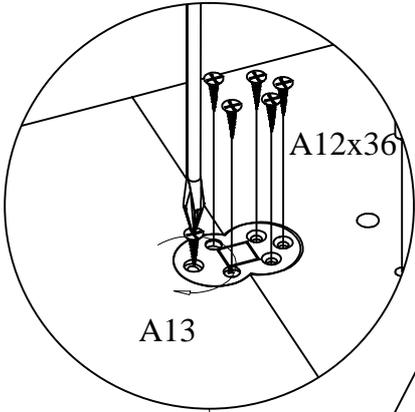


Step 2

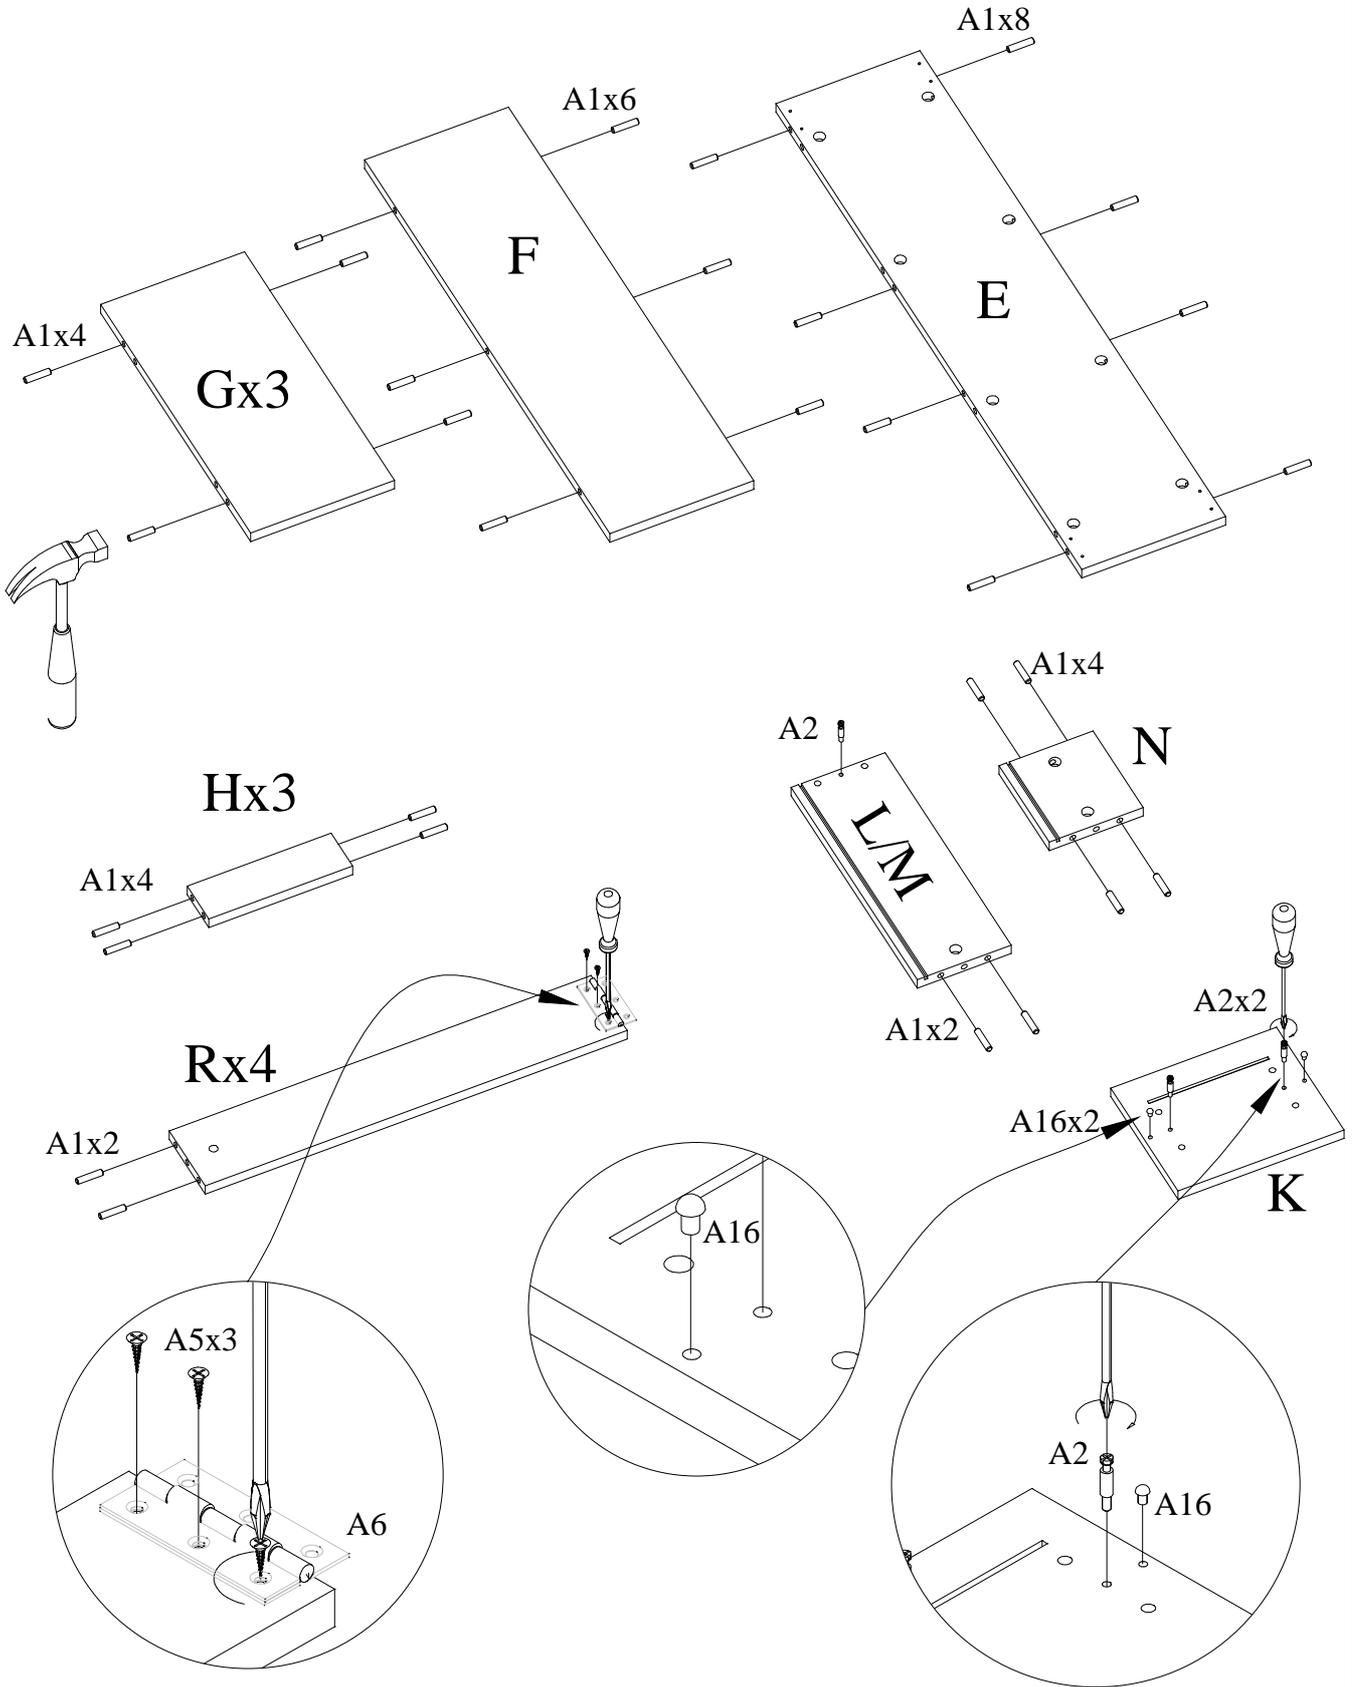


Step 3

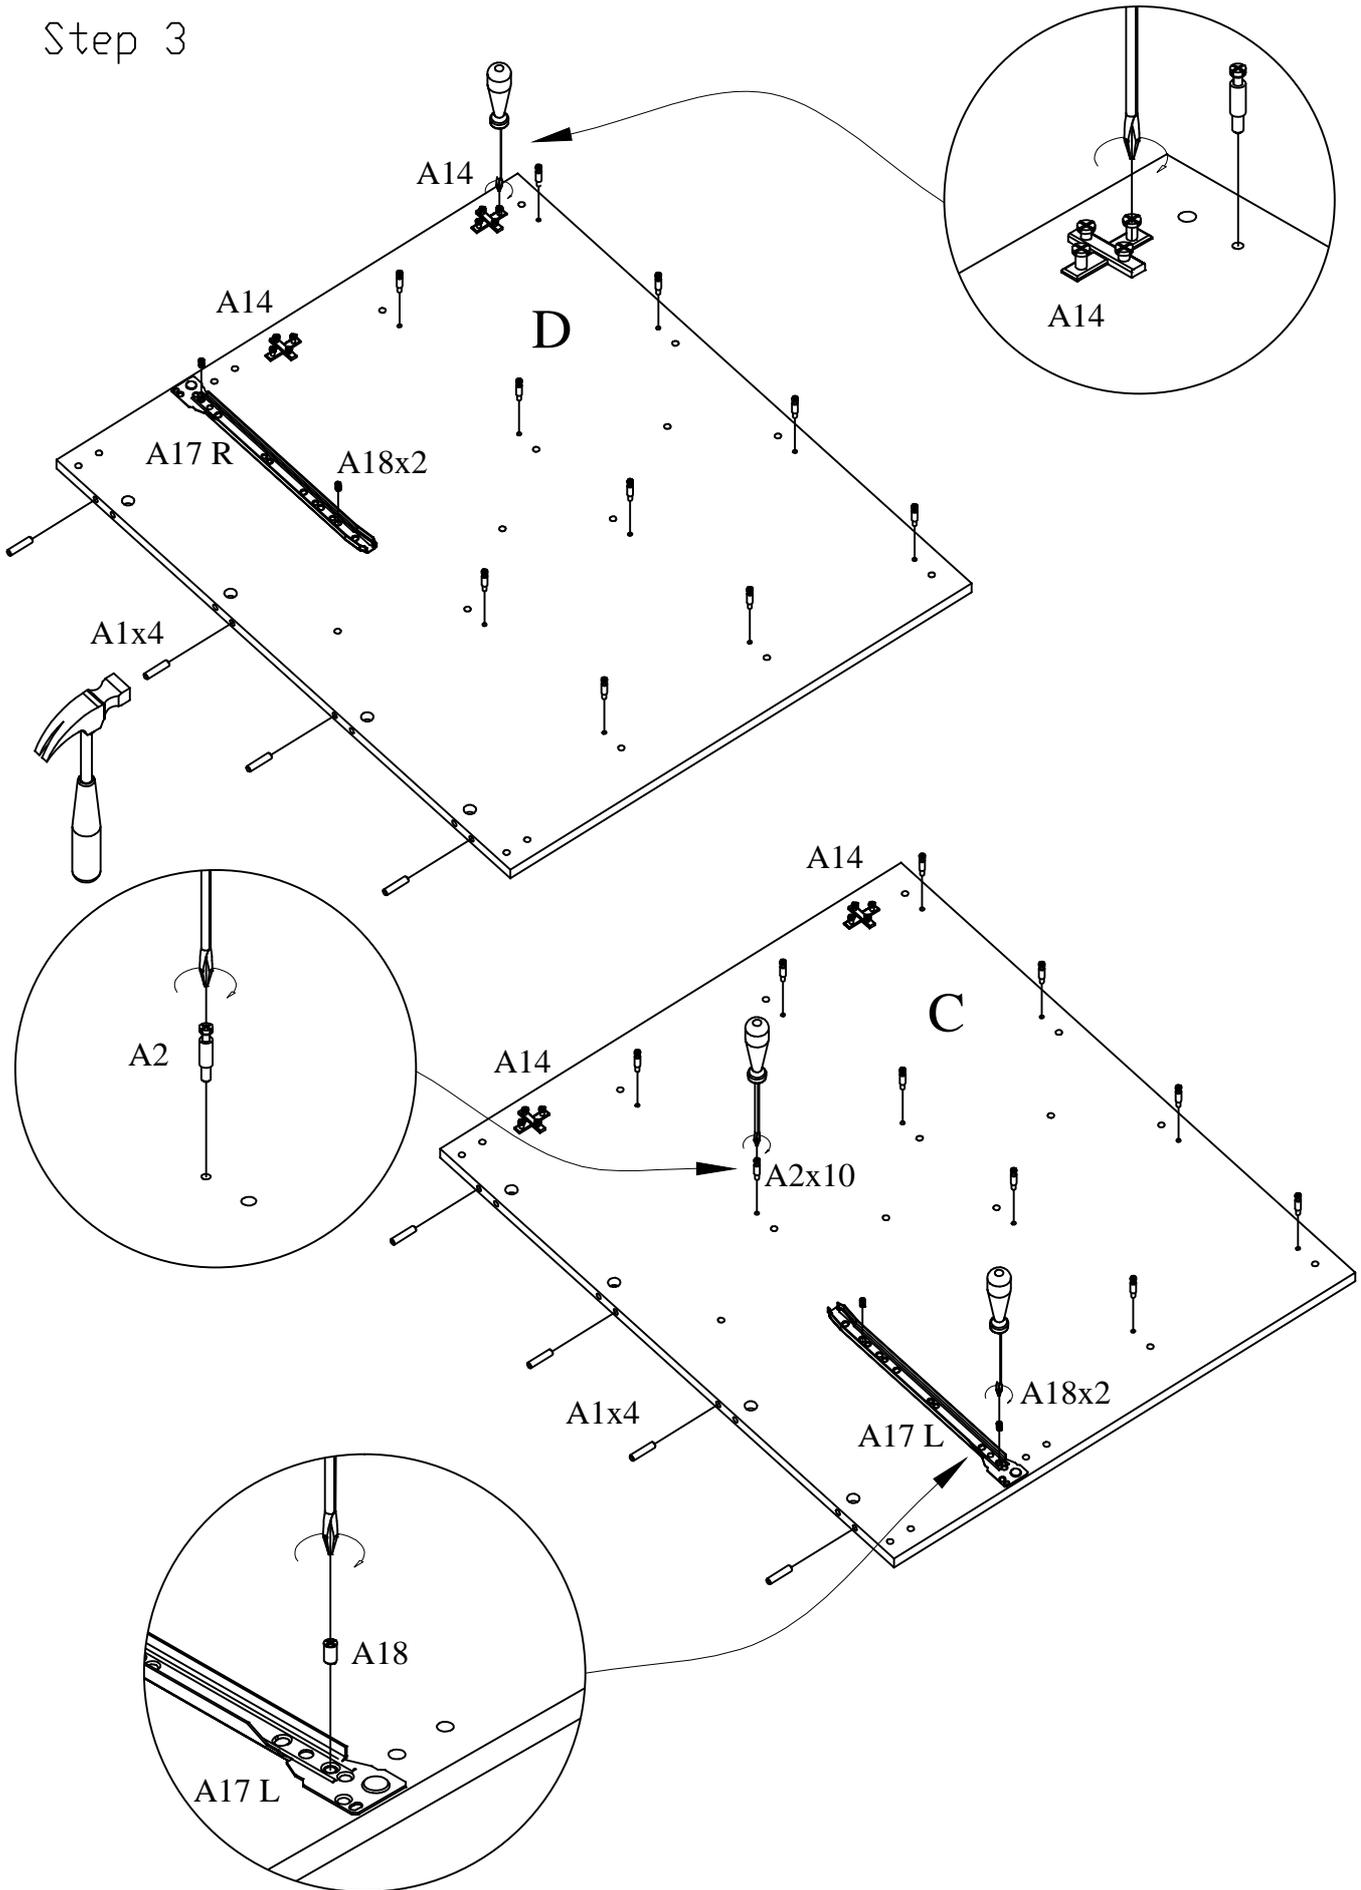


Step 4

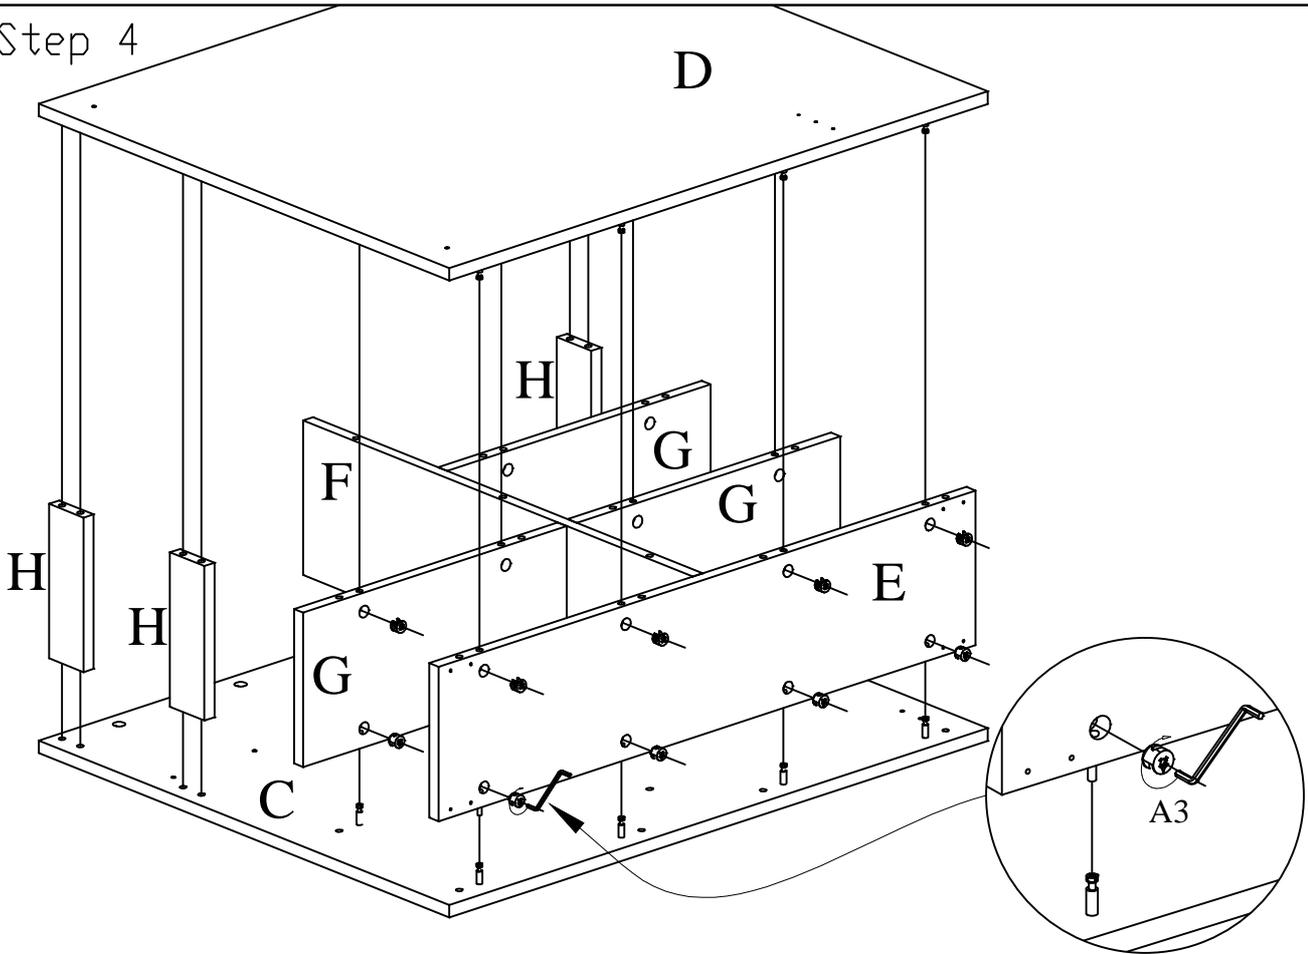


Step 5

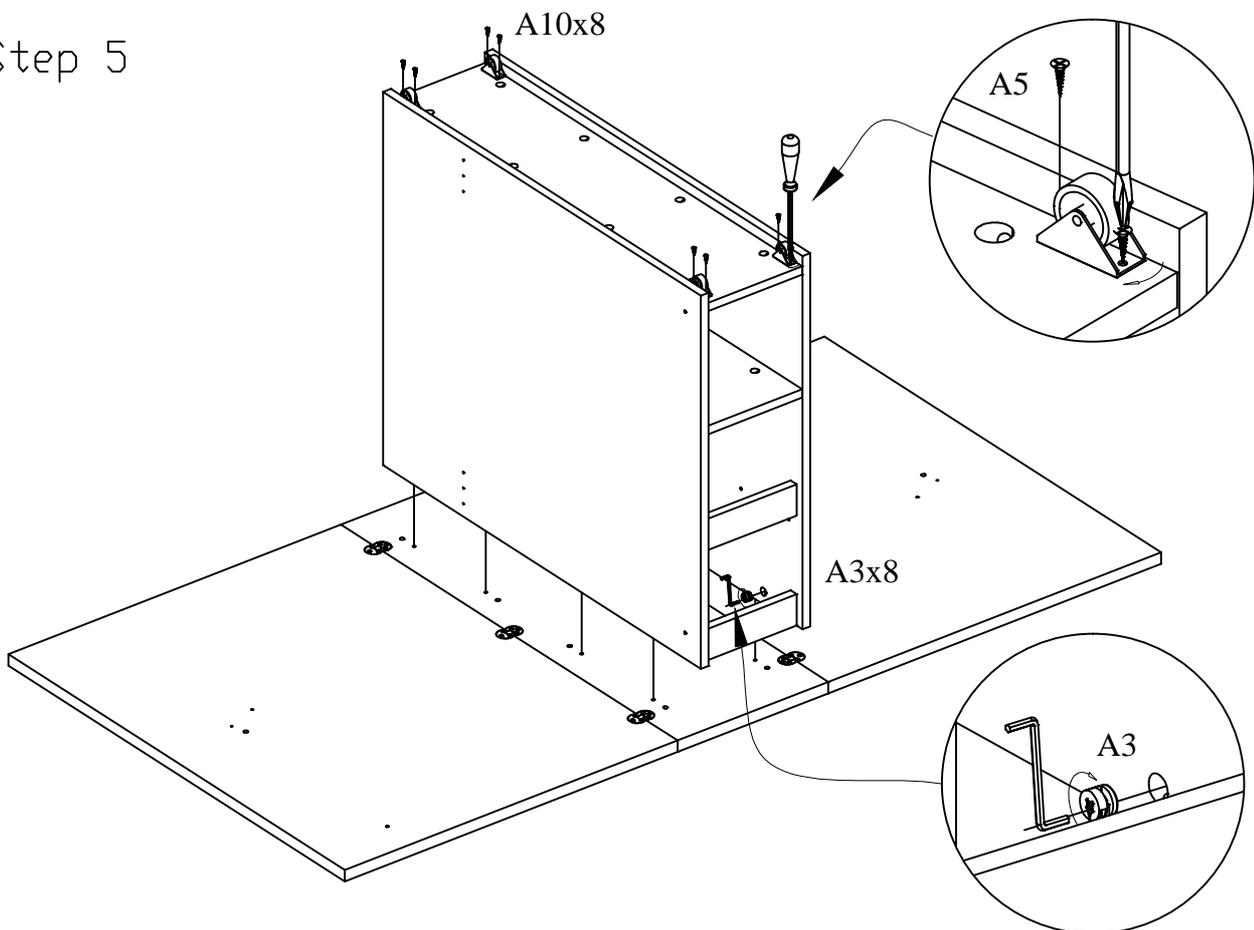


Step 6 x2

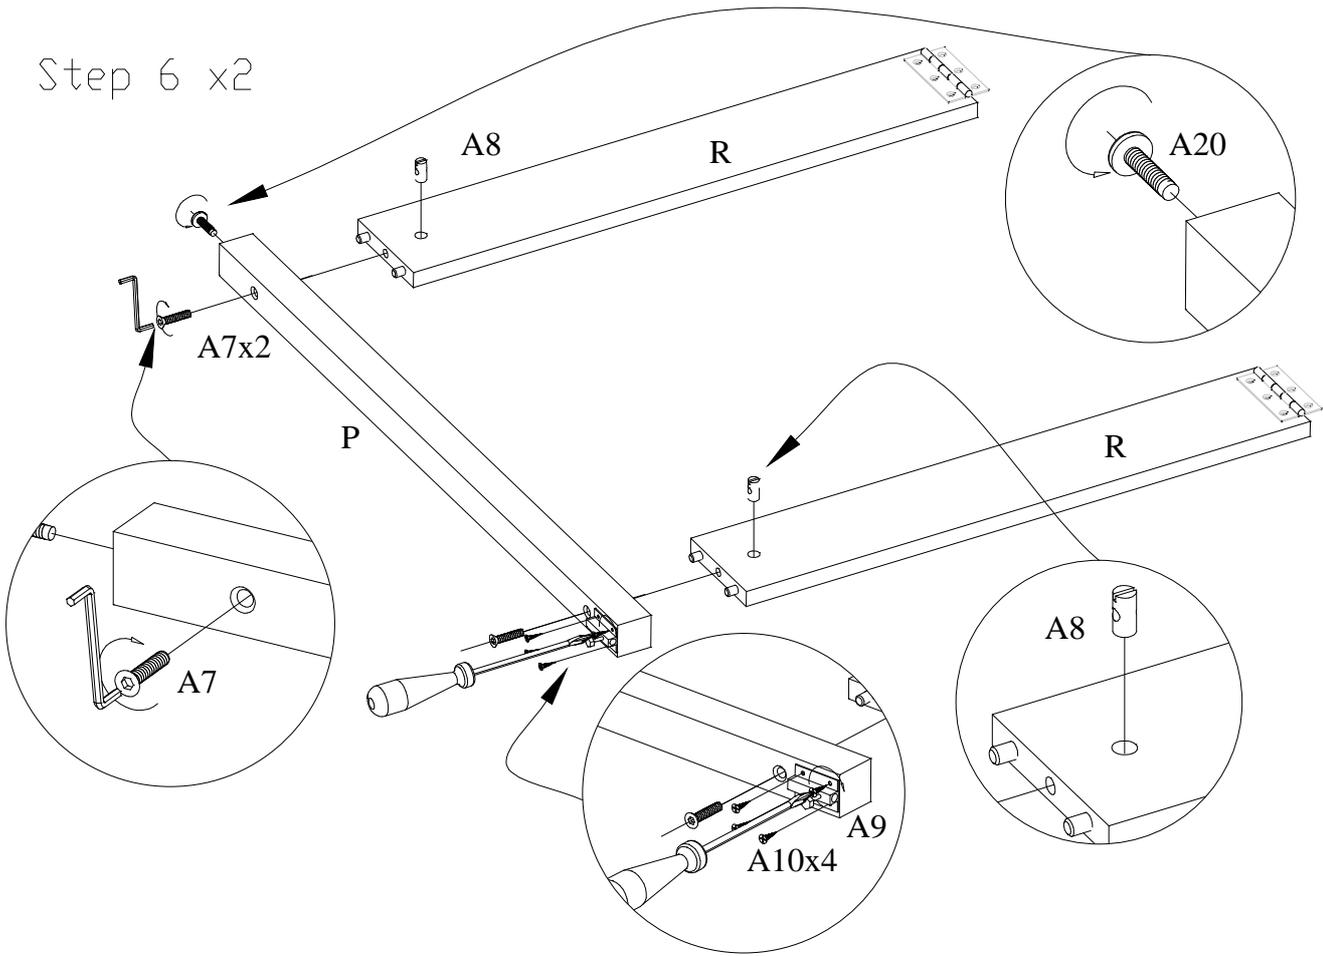



Step 7

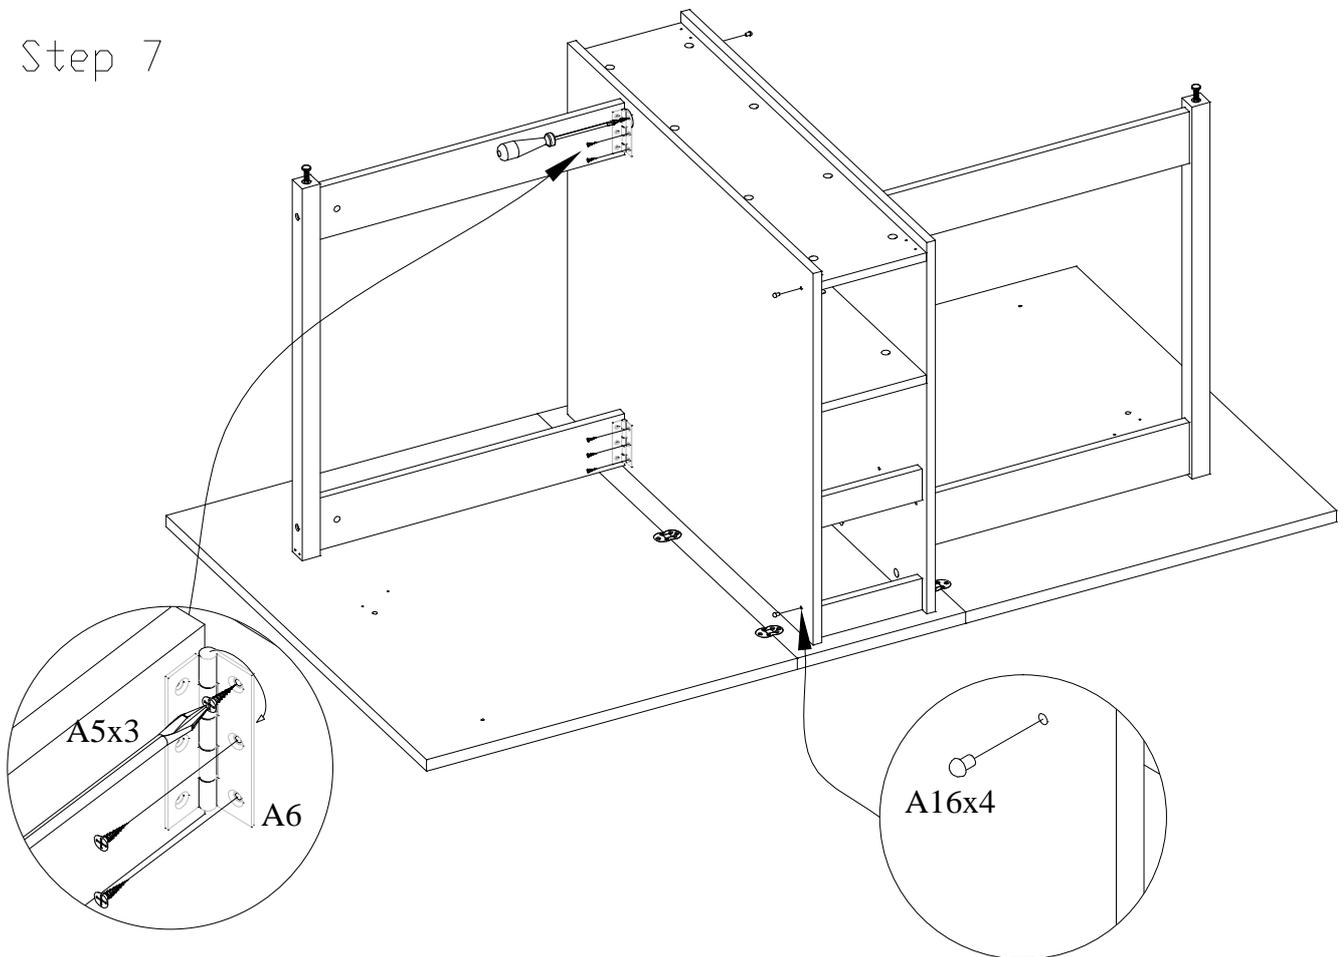


Step 8

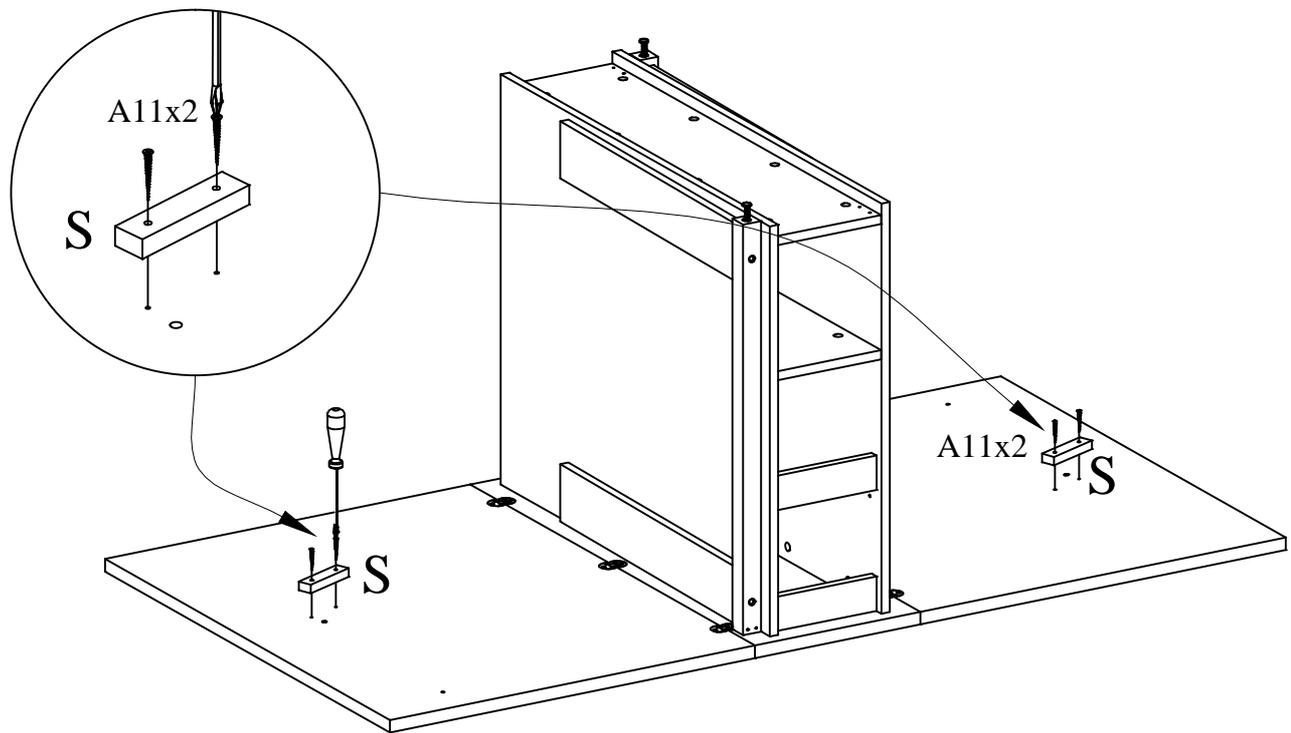


Step 9

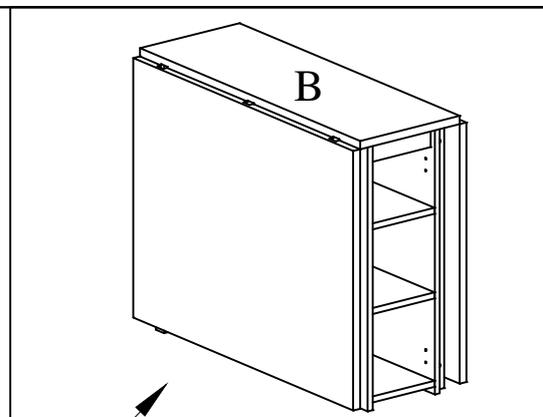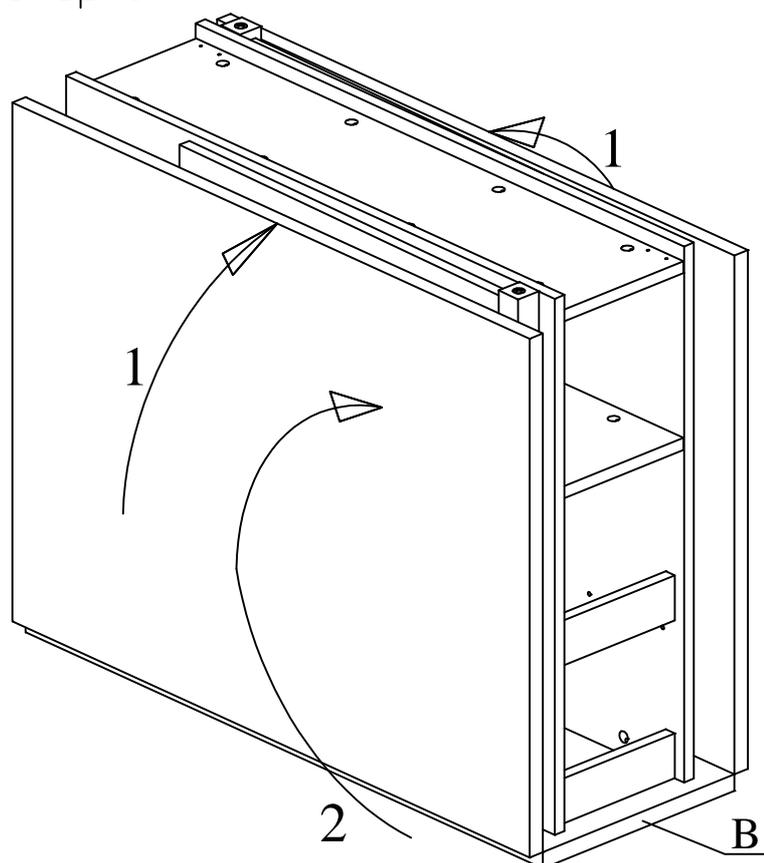


Step 10

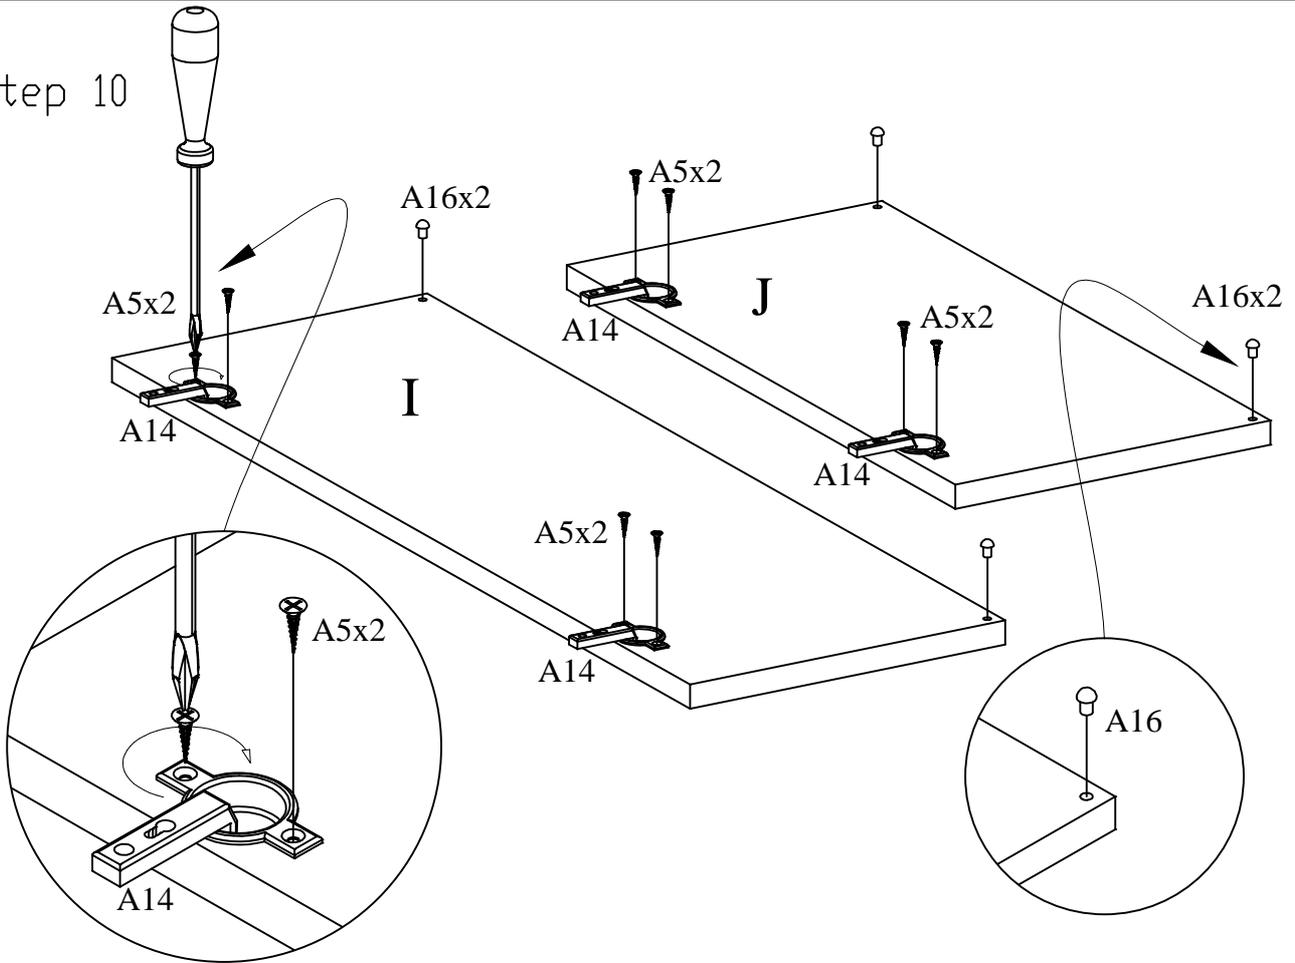


Step 11

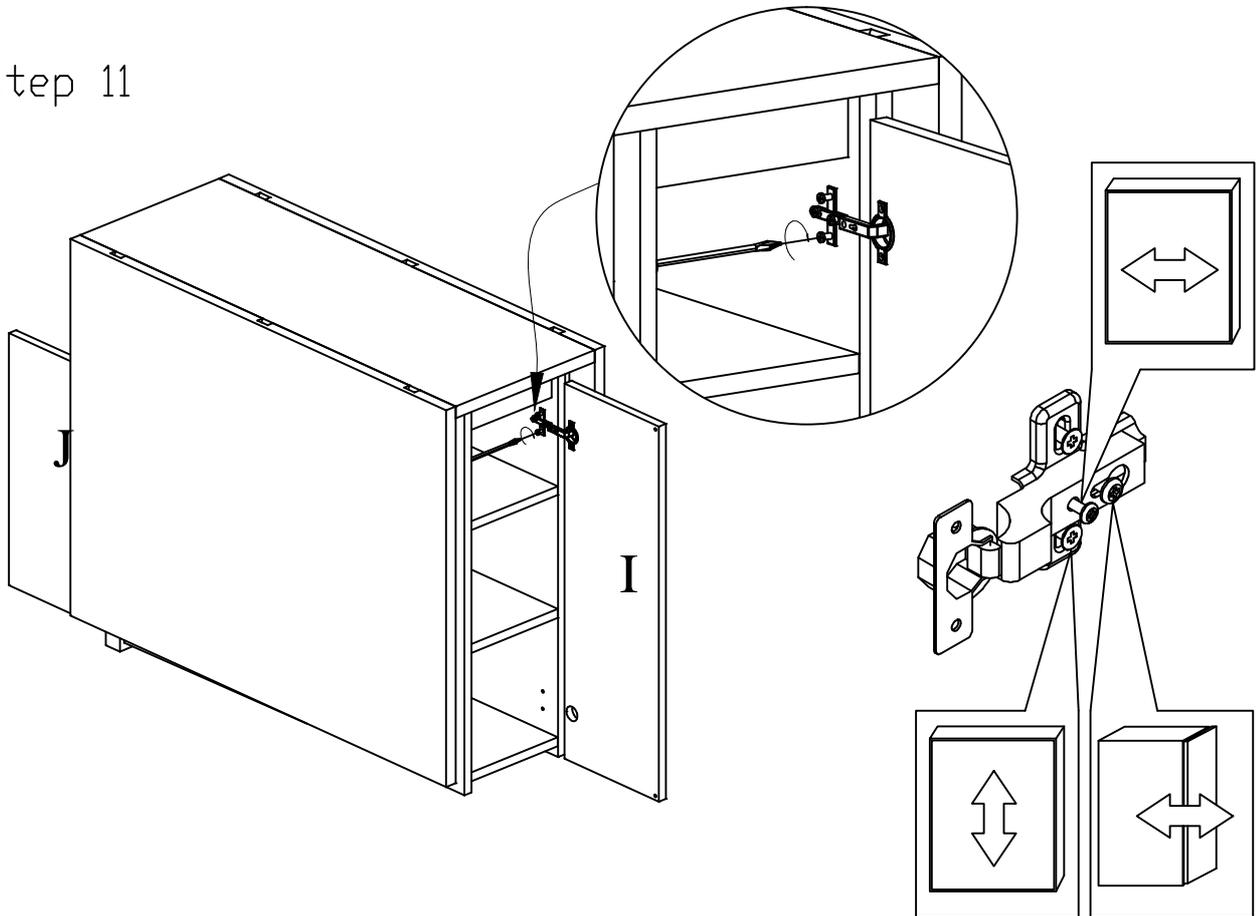


Step 12

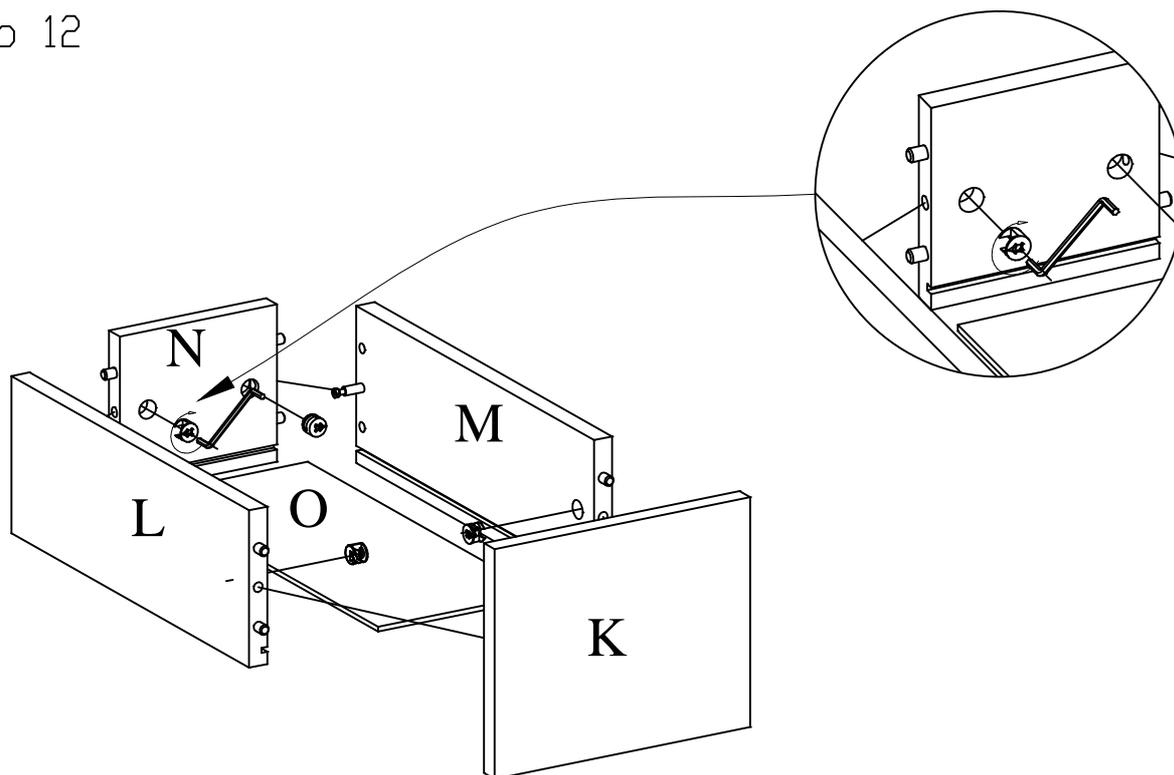

Step 13

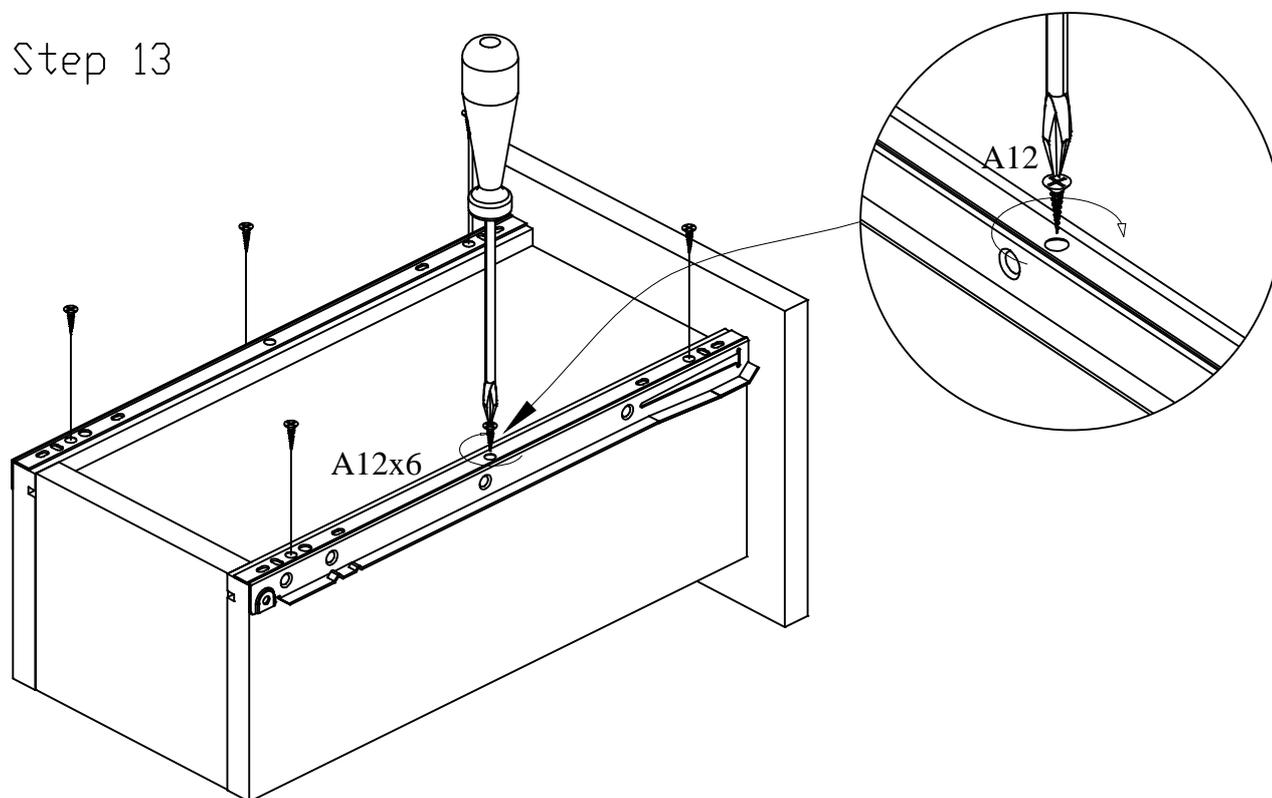

Step 14

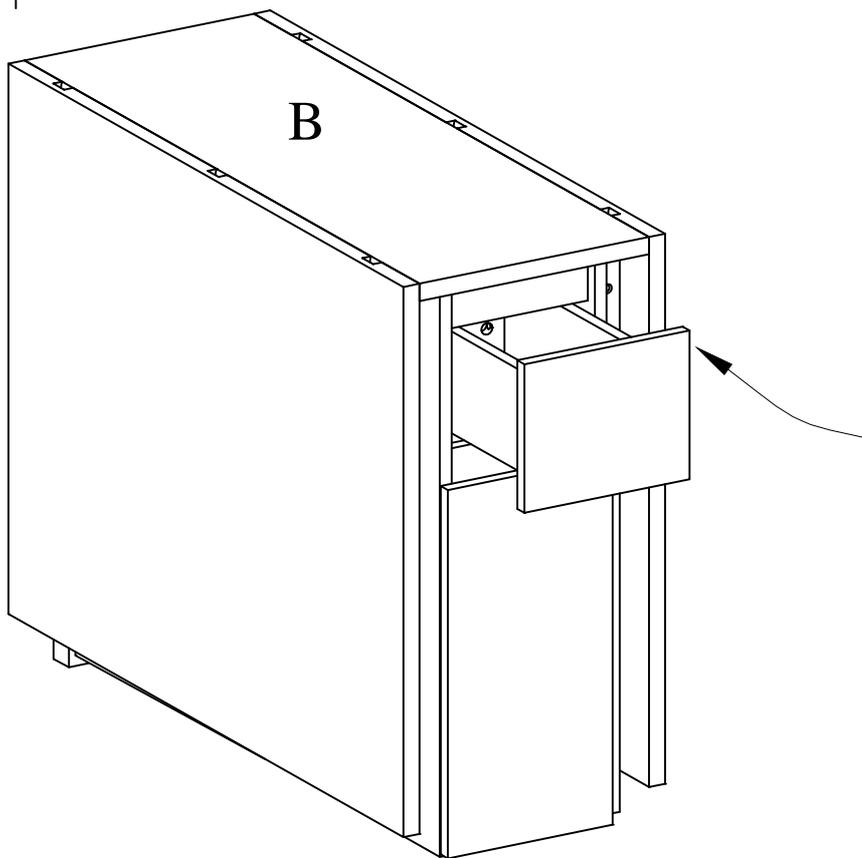

Step 15

